

TFT LCD COLOR

MONITOR



DEAR CUSTOMERS

Thank you for purchasing the liquid crystal display monitor. This product employs new integrate circuits and high quality TFT LCD modules. It is putting out with its low power consumption, emits no radiation, and other advantage characteristics. This product is shaped with modern style and is easy to be carried with. The color TFT LCD is the most suitable display for VGA,VCD, DVD and GPS system for motorcars and ships .It also can be used in the office ,in flat ,at home also in other suitable position. You will certainly benefit from this monitor in lots of ways, to name some of them: convenience, safety, space-saving.

We hope that you will have the enjoyment of your new mini color TFT LCD.

To ensure the best use of the unit, please read this handbook carefully beforehand.

CAUTION

1. Please use the adapter attached in the accessory.
2. Do not expose this product to direct sunlight, heat or humid conditions.
3. Keep away from strong light while using this product so as to obtain the clearest and the most colorful picture.
4. Please avoid heavy impact or drop onto the ground.
5. Do not use chemical solutions to clean this unit. Please simply wipe with a clean soft cloth to keep the brightness of the surface.
6. If the product does not operate normally when the instructions are followed. Adjust only those controls that are covered by the instructions. Improper adjustment of other controls may result in damage and will often require extensive work of a qualified technician.

CONTENTS

1. PRODUCT DESCRIPTION -----
2. REMOTE CONTROLLER -----
3. MATCHED CABLES-----
4. MENU OPERATION -----
 - IN AV MODE-----
 - IN PC MODE-----
 - IN DVI&HDMI MODE-----
5. ACCESSORIES -----
6. PARAMETER -----
7. TROUBLESHOOTING-----
8. REMARK-----


1.PRODUCT DESCRIPTION

Picture

Model 1:



1 2 3 4 5 6 7 8

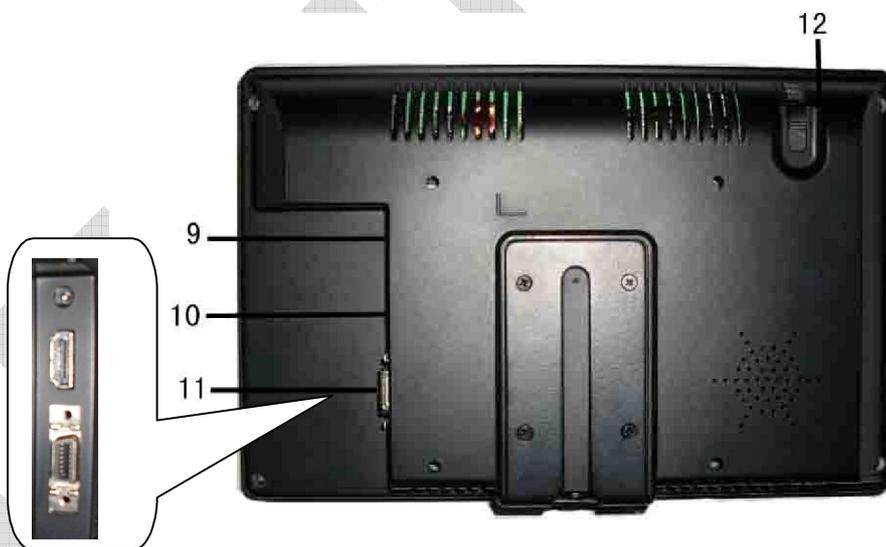

12

9

10

11

1. POWER : Power on/off
2. Infrared receiving window
3. A/V: PC、 DVI、 VIDEO1、 VIDEO2、 HDMI switch
4. <: Selection key, to select item on the OSD or push the key in PC mode directly to adjust phase automatically
5. > : To select function on OSD or to adjust the brightness directly under 6 classes
6. MENU: To activate OSD menu
(PS: Long press "MENU" button to zoom in or out picture automatically when receiving HDMI signal.)
7. -: Volume down or to adjust the value of menu setting function
8. +: Volume up or to adjust the value of menu setting function
9. Power : DC 12V
10. DVI、 HDMI input
11. 14P SKS input
12. Touch pen

Model 2:




1. Infrared receiving Window
2. < : Selection key, to select item on the OSD or push the key in PC mode directly to adjust phase automatically
3. > : To select function on OSD or to adjust the brightness directly
4. MENU: To activate OSD menu

(PS: Long press "MENU" button to show PC/DVD picture switch when receiving HDMI signal, the initial mode is DVD.)

5. +: Volume up or to adjust the value of menu setting function
6. -: Volume down or to adjust the value of menu setting function
7. A/V: PC、DVI、VIDEO1、VIDEO2、HDMI switch
8. POWER : Power on/off
9. Power : DC 12V
10. HDMI input
11. 14P SKS input
12. Touch pen

2.REMOTECONTROL

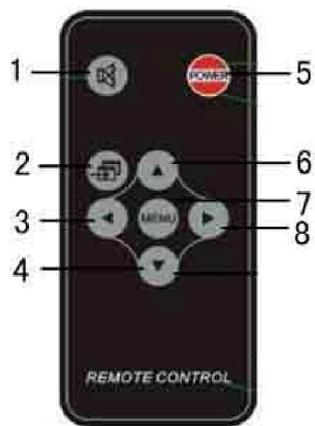

1. MUTE

2. Video switch: PC、 DVI、 VIDEO1、 VIDEO2、 HDMI switch

3. ◀: Left move, Volume down or to adjust the value of setting function

4. ▼: Down move, to select function on OSD

5. POWER ON/OFF

6. ▲ : UP move, To select function on OSD

7. MENU

8. ▶ : Right move, Volume up or to adjust the value of setting function

3.MATCHEDCABLES


Match cable

SKS cable:




- 1 14P SKS Input Jack : all kinds of AV signal input ,note that put it correctly into the SKS input jack of the monitor
- 2 Black 9-pin VGA signal input jack
- 3 Yellow RCA :Video signal 1 input
- 4 Yellow RCA :Video signal 2 input
- 5 White RCA :Audio signal input
- 6 Black Jack :DC 12V Power input

VGA cable:

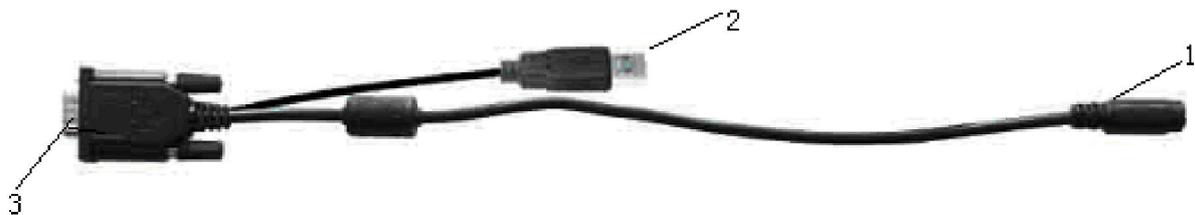


1. Black 9-pin VGA connector, contact to the 9-pin VGA signal input jack of SKS cable.
2. USB end connect the USB port of computer for touch screen function.
3. 15-pin VGA signal input end connect VGA port of the computer

HDMI connect DVI cable:

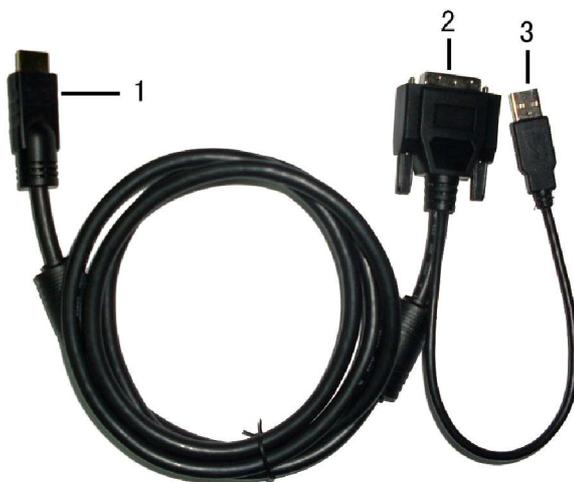

1. HDMI signal input end
2. DVI signal input connect with device with DVI signal
3. USB connect with the USB port of computer for touch function

HDMI connect HDMI cable:

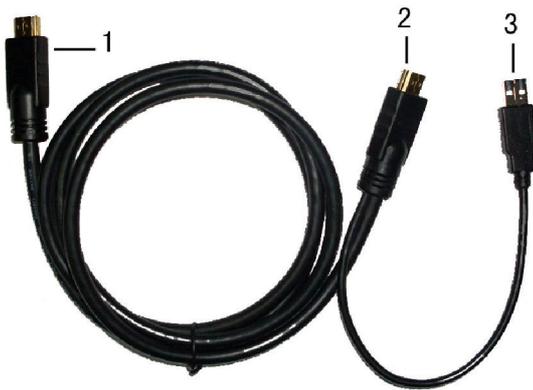


1. HDMI signal input end
2. HDMI signal input connect device with HDMI signal
3. USB port connect computer for touch function

4.MENUOPERATION

After connected correctly and then Power on, Press “MENU” on the unit or by remote control to show MENU

IN AV MODE

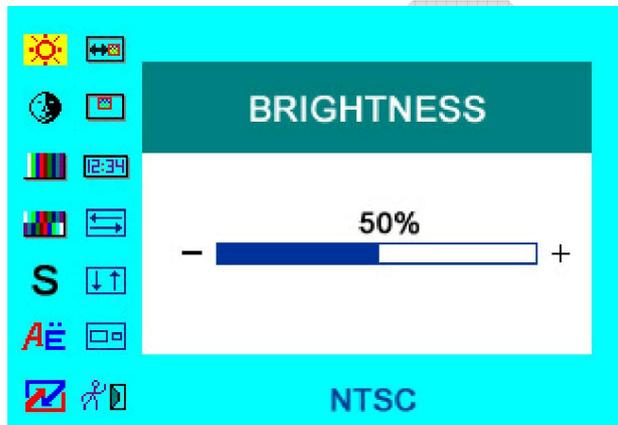

Press “</>” on the unit or “▲/▼” on the remote control to select item, eg. ☀, and it will be highlighted; and then press +/- of the unit or ◀/▶ to adjust the favorite values. It shows current picture format (NTSC&PAL) below the dialog box.



BRIGHTNESS: to adjust the luminance of brightness



CONTRAST : to adjust the level of contrast



SATURATION: to adjust the level of saturation

 TINT: to adjust the hue of image

S SHARPNESS: to adjust the level of sharpness

A LANGUAGE : There are 2 languages provided for choice, English and Chinese

 RESET: you can reset adjustment of the unit when click “YES”

 OSD H-POSITION ADJUSTMENT: to adjust the OSD move in horizontal direction

 OSD V-POSITION ADJUSTMENT: to adjust the OSD move in vertical direction

 OSD DURATION: to adjust the duration of OSD from 5-100 seconds.


 picture over-turn to left or right

 picture over-turn to up or down

 Mode shift between 4:3 and 16:9

 EXIT OSD: select “YES” to exit

IN PC MODE:

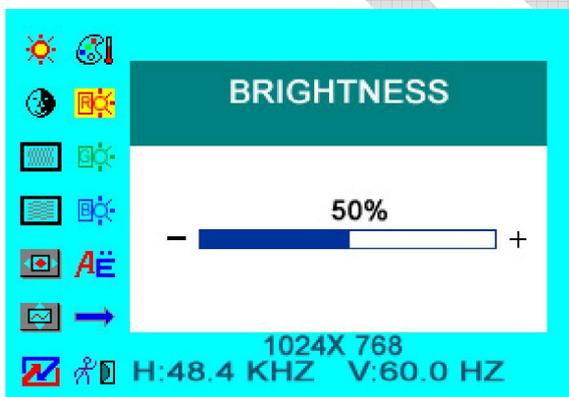

Press “</>” on the unit or “/” on the remote control to select item, eg. , and it will be highlighted with yellow; and then press +/- of the unit or /” to adjust the favorite values. It shows picture mode specifications below the dialog box.

 BRIGHTNESS: to adjust the luminance of brightness

 CONTRAST : to adjust the level of contrast



PHASE : to adjust the beginning point and terminal point of image



FREQUENCY: to adjust the frequency range of image



OSD H-POSITION : to adjust the picture position in horizontal direction



OSD V-POSITION : to adjust the picture position in vertical direction



RESET: you can reset adjustment of the unit when click “YES”



COLOR TEMPERATURE :choose color and temperature at first, such as: 6500⁰ K, 7500⁰ K or 9300⁰ K.

Only if under “USER” mode, can adjust  RED,  GREEN and  BLUE to meet the color value you need.



LANGUAGE : There are 2 languages provided for choice, English and Chinese



MISCELLANEOUS : to select  to enter next page

As follows:

OSD MISCELLANEOUS



OSD H-POSITION ADJUSTMENT: to adjust the OSD move in horizontal direction



OSD V-POSITION ADJUSTMENT: to adjust the OSD move in vertical direction



OSD DURATION: to adjust the duration of OSD from 5-100 seconds.



OSD AUTO COLOR : If select “YES” it will adjust automatic color system to

the best

 picture over-turn to left or right


 picture over-turn to up or down

 Mode shift between 4:3 and 16:9


 EXIT OSD: select “YES” to exit

IN DVI & HDMI MODE

DVI MODE

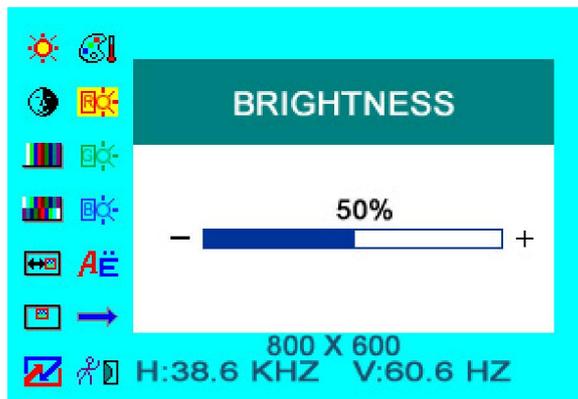

HDMI MODE

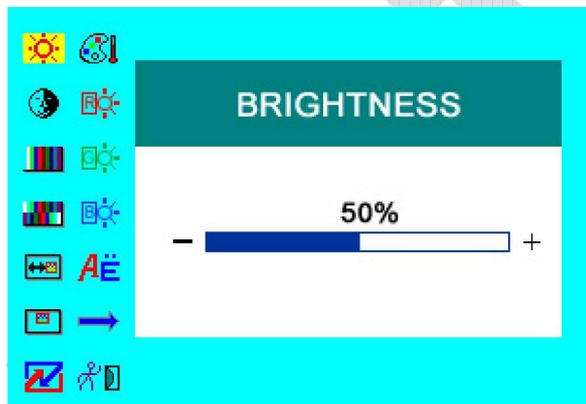

Press “</>” on the unit or “/” on the remote control to select item, eg. “”, and it will be highlighted; and then press +/- of the unit or /” to adjust the favorite values. It shows picture mode specifications below the dialog box in DVI mode, but not in HDMI mode.

 BRIGHTNESS: to adjust the luminance of brightness

 CONTRAST : to adjust the level of contrast

 SATURATION: to adjust the level of saturation (this function doesn't work

under DVI/HDMI mode)

 TINT: to adjust the hue of image (this function doesn't work under DVI/HDMI mode)

 OSD H-POSITION ADJUSTMENT: to adjust the OSD move in horizontal direction

 OSD V-POSITION ADJUSTMENT: to adjust the OSD move in vertical direction

 RESET: you can reset adjustment of the unit when click "YES"

 COLOR TEMPERATURE :choose color and temperature at first, such as: 6500⁰ K, 7500⁰ K or 9300⁰ K.


Only if under "USER" mode, can adjust  RED,  GREEN and  BLUE to meet the color value you need.

 LANGUAGE : There are 2 languages provided for choice, English and Chinese


 MISCELLANEOUS : to select  to enter next page.

As follows:

OSD MISCELLANEOUS OF DVI MODE

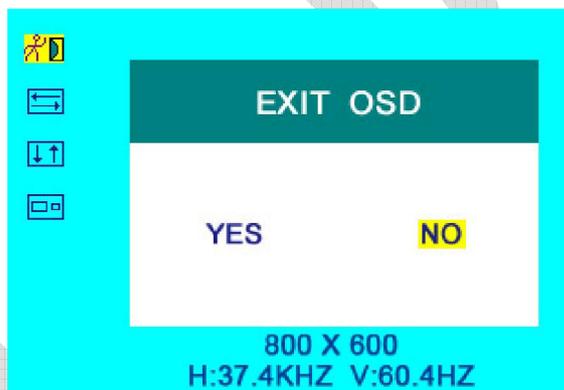

OSD MISCELLANEOUS OF HDMI MODE

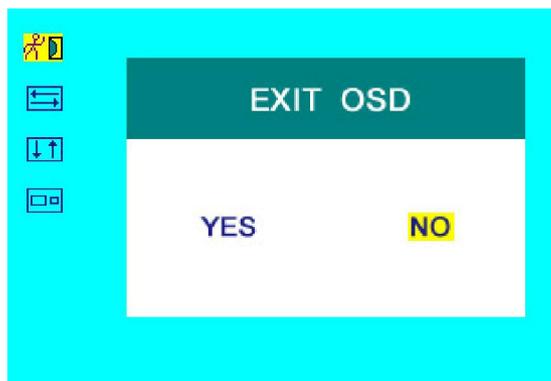

 picture over-turn to left or right

 picture over-turn to up or down

 Mode shift between 4:3 and 16:9

 EXIT OSD: select "YES" to exit

WILLIPUT DIRECT

5.ACCESSORIES



- | | |
|-----------------------------|---|
| 1. Remote control | 1piece |
| 2. Bracket | 1piece |
| 3. Touch pen | 1piece (option) |
| 4. Drive disk | 1piece (touch driver, please choose and install correct touch driver as per your PC OS) |
| 5. Home DC adapter | 1piece |
| 6. Car power cord (pass CE) | 1piece |
| 7. 14PIN SKS | 1Piece |
| 8. VGA cable | 1piece (MD connect HDB 15pin VGA cable) |
| 9. HDMI connect HDMI cable | 1piece |
| 10. HDMI connect DVI cable | 1piece |
| 11. Manual | 1copy |

6.PARAMETER

	Model 1	Model 2
Panel Size	TFT LCD 7 '' 1152000 pixels	TFT LCD 8 '' 1152000 pixels
Resolution	800×480	800×480
Brightness	250cd/m ²	250cd/m ²
Viewing Angle	140°/ 120°(H/V)	130°/ 120°(H/V)
Input Voltage	DC 12V	DC 12V
Input Signal	PC(VGA),AV1,AV2,HDMI,DVI	PC(VGA),AV1,AV2,HDMI,DVI
Power Consumption	≤8W	≤8W
Contrast	500:1	300:1
Size(LWD): mm	185.5mm×122mm×32mm	210mm×136mm×32mm
Weight	450g	504g

7.TROUBLE SHOOTING

1. Only black-and-white image

Check the level of color saturation and brightness is proper.

2. Power on but no picture

Make sure the PC、DVI、VIDEO、HDMI cable is tightly connected exactly correctly Make sure you are using the standard power adapter coming with the monitor.

3. Wrong or abnormal colors

If any color is missing, check the cables to make sure it is securely connected. Broken or loose pins in the cable connector can cause a bad connection.

4. Remote controller doesn't work

Check the battery to make sure the battery is installed properly and make sure it is not a low battery. The signal is interfered by some obstructions.

5. If any abnormal matters happened, pls enter "MENU" choose to reset

6. If it can't be touch, pls check the USB connect exactly correct or not, or install the correct touch driver as per the PC OS ?

8.REMARK:

If there are still any problems, you can connect with the related deals

*If interruptive image occurs, it maybe that the VGA signal frequency isn't matched with normal standard

*It is a normal condition that some bright lines appear on the screen when you turn the unit.

LILLIPUT DIRECT